

JUMO CANtrans p Ceramic
JUMO CANtrans p
JUMO CANtrans pT
JUMO CANtrans T

B40.2055.1

B40.2056.1

B40.2057.1

B90.2910.1

Operating Instructions

01.07/00438564

Factory setting

Baud rate: **500 kbaud**
see Chapter 4.1 for setting

Node ID: **CANtrans pT: 123**
 CANtrans p: 124
 CANtrans T: 125
 CANtrans TT: 126
Setting ⇨ **Chapter 4.2 “Setting the node ID”, 13**

Contents		Page
1	Introduction	5
1.1	Typographical conventions	5
1.2	Preface	6
2	Transmitter JUMO CANtrans	7
2.1	Application	7
2.2	Block diagram	7
2.3	Setup program	9
3	Installation	10
3.1	Electrical connection	10
4	Commissioning	12
4.1	Setting the CAN baud rate	12
4.2	Setting the node ID	13
5	CANopen function	14
5.1	Overview of communication functions	14
5.2	NMT	15
5.3	Sync	16
5.4	Emergency	16
5.5	PDO	17
5.6	SDO	19
5.7	Heartbeat	20
5.8	Node Guarding	21
5.9	LSS	22
6	Device function	23
6.1	Device profile	23
6.2	Data flow: pressure channel	23
6.3	Data flow: temperature channel	24
7	Object dictionary	25
7.1	Overview	25

8	Programming examples	30
8.1	General	30
8.2	Function	30
8.3	Testing the connection	30
8.4	Heartbeat Producer Time	32
8.5	Boot mode “Minimum bootup”	32
8.6	Event time	32
8.7	Setting the node ID	33
8.8	Setting the baud rate	33
8.9	Reading out the minimum value	33
8.10	Reading out the maximum value	34
8.11	Reading out the measurement in “Float” format	34

1.1 Typographical conventions

1.1.1 Warning signs



Danger

This symbol is used when there may be **danger to personnel** if the instructions are ignored or not followed correctly.



Caution

This symbol is used when there may be **damage to equipment or data** if the instructions are ignored or not followed correctly.

1.1.2 Note signs



Note

This symbol is used when your **special attention** is drawn to a remark.



Reference

This symbol refers to **further information** in other chapters.

abc¹

Footnote

Footnotes are remarks that **refer to specific points** in the text. Footnotes consist of two parts:

A marker in the text and the footnote text.

The markers in the text are arranged as continuous superscript numbers.

The footnote text (in smaller typeface) is placed at the bottom of the page and starts with a superscript number.

*

Action

This symbol indicates that an **action to be performed** is described.

The individual steps are marked by this asterisk, for example:

* Connect plug

1 Introduction

1.2 Preface

Please read these Operating Instructions before commissioning the instrument. Keep the manual in a place that is accessible to all users at all times.

Please assist us to improve these operating instructions, where necessary.

Your suggestions will be appreciated.

Phone +49 661 6003-0
Fax +49 661 6003-607
email mail@jumo.net



All necessary settings are described in this manual. However, if any difficulties should still arise during start-up, you are asked not to carry out any unauthorized manipulations on the unit. You could endanger your rights under the instrument warranty!

Please contact the nearest subsidiary or the head office in such a case.

2 Transmitter JUMO CANtrans


2.1 Application

Transmitters in the JUMO CANtrans series are used for acquiring pressures or temperatures in liquid or gaseous media.

The measurements from the pressure or temperature sensors are digitized and made available for further processing via the CANopen serial bus protocol. Several useful extra functions are implemented through the DS 404 device profile. All settings can be made using standard CANopen software tools.

Overview of the CANtrans series		
CANtrans p Ceramic	Type 40.2055	Pressure transmitter (ceramic sensor)
CANtrans p	Type 40.2056	Pressure transmitter (stainless steel sensors)
CANtrans pT	Type 40.2057	Pressure and temperature transmitter
CANtrans T	Type 90.2910	Temperature or twin temperature transmitter

2.2 Block diagram

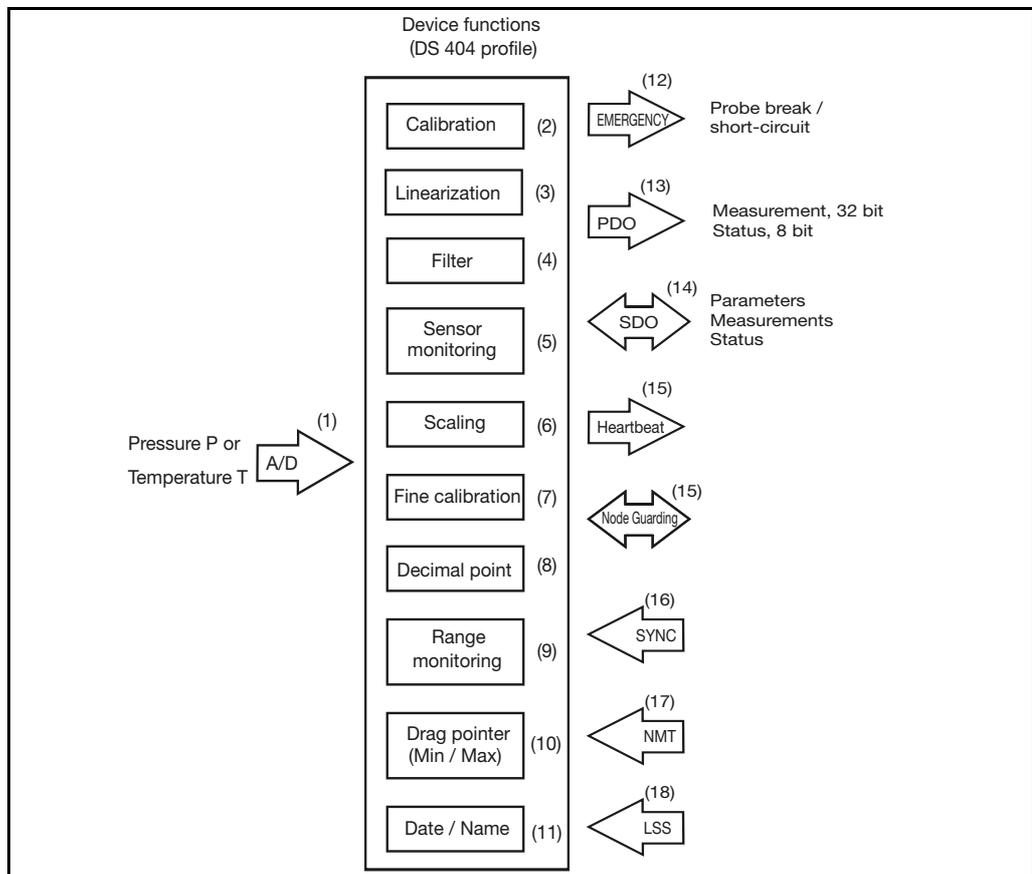

2 Transmitter JUMO CANtrans

2.2.1 Operation

- (1) The analog signal from the pressure cell or the temperature sensor is digitized.
- (2) The pressure or temperature signal is digitally calibrated at the factory.
- (3) The temperature signal is linearized.
- (4) Undesirable signal fluctuations can be suppressed through the (adjustable) filter constant.
- (5) The sensor monitoring facility continuously checks the correct performance of the sensor signal and triggers high-priority emergency telegrams in the event of an error.
- (6) The measurement can be scaled to any dimensional unit (or in % of range).
- (7) Fine calibration features an autozeroing function (with pressure sensors only) and a freely adjustable shift of the characteristic (offset).
- (8) The measurements are output with a freely selectable decimal place.
- (9) Range monitoring features freely selectable upper and lower limits. The result is output as a status byte together with the measurement value in the PDO telegram.
- (10) The drag pointer function stores the minimum and maximum pressure measurements.
- (11) Date and name of the last servicing action can be stored.
- (12) An emergency telegram is triggered in the event of a sensor fault.
- (13) The PDO telegram contains the 32-bit measurement and the 8-bit status. The measurement that is output can be controlled by means of different trigger conditions.
- (14) Parameters can be set through SDO telegrams, and measurements and status can be requested.
- (15) The heartbeat signal or Node Guarding¹ can be used to additionally monitor the transmitter functions.
- (16) Measurement transmission can additionally be controlled by using the Sync command.
- (17) The NMT telegrams serve to control the operating status of the transmitter.
- (18) The CAN node ID and CAN baud rate is set via LSS or SDO, according to choice.

¹ Node Guarding is only available for transmitters with sensor.

2 Transmitter JUMO CANtrans

2.3 Setup program

All instrument parameters, see ⇒ Chapter 7 “Object dictionary”, page 25, can be accessed via the CANopen object dictionary (EDS file) and can be set using standard CANopen software tools. An appropriate EDS file is available for all device types. The file is downloadable free of charge from the JUMO home page: www.jumo.net).

3 Installation

3.1 Electrical connection

Earth the instrument at the pressure connection.
 The bus ends must be provided with a line termination.
 ⇨ Chapter 3 “Installation” / “Line termination”, page 11.

Bus cable

- the bus specifications to ISO 11 898 must be observed
- cable diameter 6 to 12 mm
- conductor cross-section up to 1.5mm² per core
- signal cables must be routed separately from cables with voltages above 60 V
- use cables with twisted cores
- avoid the vicinity of electrical installations, or use screened cables

Connection



Connection		Terminal assignment	
		M12 connector	terminal box with moulded cable Sales No. 40/00337625
Supply voltage 10 – 30 V DC		CAN_V+ CAN_GND	2 3 white blue
Output CANopen		screen CAN_H CAN_L	1 4 5 brown black gray

Circular connector

M12 x1; 5-pole to IEC 60 947-5-2


Plug

Socket

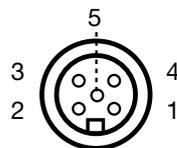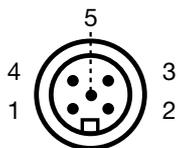

3 Installation

Line termination The CAN bus has a linear topology. Each end of the bus must be terminated with a $120\ \Omega$ resistor, to avoid signal reflections and, as a consequence, transmission problems.

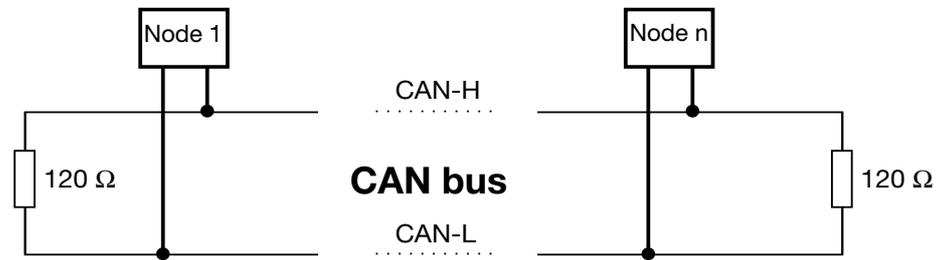

4 Commissioning

4.1 Setting the CAN baud rate

General

The baud rate is set to 500 kbaud ex-factory.

The CAN baud rate can be set both via SDO telegrams (object dictionary) and LSS.

Setting via SDO

The CAN baud rate can be reprogrammed via the CANopen object dictionary, index 0x2001.

This setting will only be accepted as the new CAN baud rate after resetting the transmitter.

CAN baud rate [kbaud]	Max. bus length [m]	Entry in object dictionary 0x2001
1000	25	0
800	100	1
500	100	2
250	250	3
200	250	99
125	500	4
100	500	98
50	1000	6
20	2500	7

Setting via LSS

CANtrans transmitters support the LSS standard (Layer Setting Services) as per DSP-305, V1.1.

This can be used to set the baud rate and node ID for the entire plant in a standardized manner.

The LSS address of the transmitter is specified on the nameplate, so it is visible from the outside.

The latest setup tools from different manufacturers can also be used to operate this function.

As an alternative, the baud rate and node ID are also settable via SDO (see above).

4.2 Setting the node ID

General

Ex-factory, the node ID is preset as follows:

for CANtrans pT: 123

for CANtrans p: 124

for CANtrans T: 125

for CANtrans TT: 126

The node ID can be set both via SDO telegrams (object dictionary) and LSS.



Each node ID may only be allocated once on the bus.

Setting via SDO

The node ID can be reprogrammed via the CANopen object dictionary, index 0x2000, thereby enabling all transmitters of a plant, for instance, to be programmed to new node IDs from a central CAN terminal.

This setting will only be accepted after resetting the transmitter.

Setting via LSS

CANtrans transmitters support the LSS standard (Layer Setting Services) as per DSP-305, V1.1.

This can be used to set the baud rate and node ID for the entire plant in a standardized manner.

The LSS address is specified on the nameplate, so it is visible from the outside.

The latest setup tools from different manufacturers can also be used to operate this function.

As an alternative, the baud rate and node ID are also settable via SDO (see above).

5 CANopen function

5.1 Overview of communication functions

Communication profile

The CAN interface communication functions correspond to the CANopen communication profile DS-301.

Objects


Data exchange with CANopen devices takes place in the form of objects. The table below contains the supported objects; these will be explained in the sections that follow.

Object	CAN identifier	Function	Note
NMT	0	network management	bus master is the sender
SYNC	0x80	PDO synchronization	bus master is the sender
EMERGENCY	0x80 + node ID	alarm message	
TPDO 1	0x180 + node ID	measurement 1 and status	identifier changeable via object dictionary 0x1800,1
TPDO 5	inactive	measurement 2 and status	identifier changeable via object dictionary 0x1804,1 only with twin probe
SDO (tx)	0x580 + node ID	access to parameters (object dictionary)	slave (CANtrans) to master
SDO (rx)	0x600 + node ID	access to parameters (object dictionary)	master to slave (CANtrans)
Heartbeat	0x700 + node ID	device monitoring	cyclic "sign of life"
Bootup	0x700 + node ID	device monitoring	once, after power ON
LSS(tx)	0x7E4 = 2020	setting of baud rate, or node ID	slave (CANtrans) to master
LSS(rx)	0x7E5 = 2021	setting of baud rate, or node ID	master to slave (CANtrans)

5 CANopen function

5.2 NMT

The transmitters in the JUMO CANtrans series support both the CANopen minimum bootup and the auto-operational bootup.

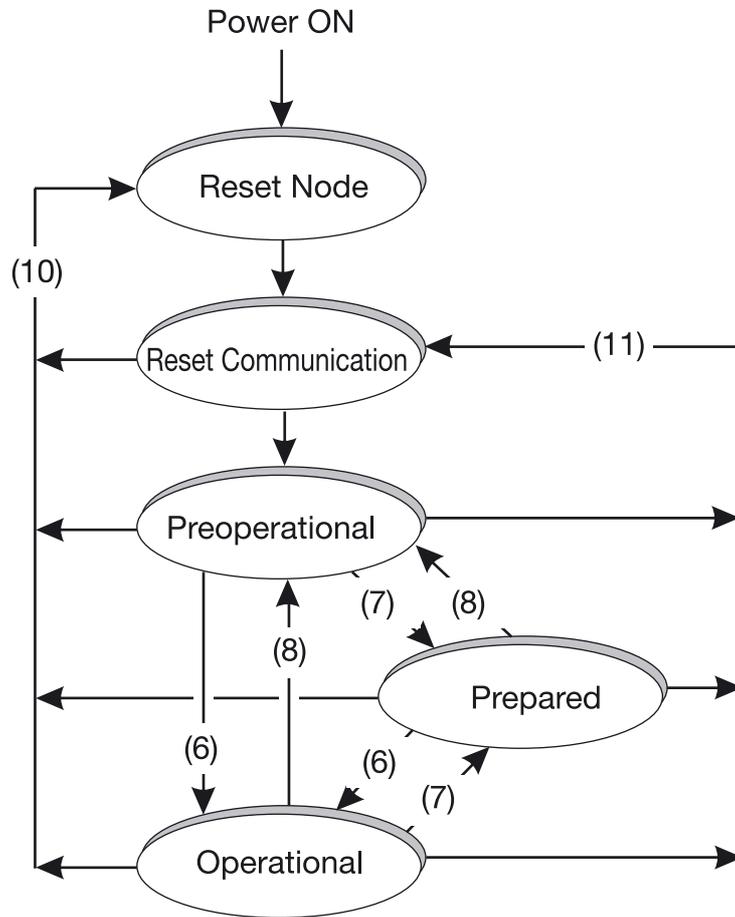

NMT user data

Network management command	Network management of object data	
	Byte 1 Command specifier	Byte 2 Node ID
Node start (6)	0x01	0 – 127 (0 = all devices)
Node stop (7)	0x02	
Enter preoperational state (8)	0x80	
Reset node (10)	0x81	
Reset communication (11)	0x82	

Settings for NMT

Boot mode	State after power ON	Setting of object 0x1F80
Minimum bootup	Preoperational	0xC ¹
Auto-operational bootup	Operational	0x8

¹ Factory setting

5 CANopen function

5.3 Sync

The PDOs of the CANtrans transmitter can be configured as “synchronous”. When a Sync object has been received, the corresponding PDO will be transmitted.

Settings for Sync


The PDO transmission type can be switched between synchronous (controlled by the master) and asynchronous (event-controlled) in the object dictionary (0x1800,2 or 0x1804,2).

Factory setting: event-controlled (=0xFF)

Transmission type	Setting the object 0x1800,2 (for PDO1) 0x1804,2 (for PDO5)
event-controlled	0xFF
synchronous	0x01

5.4 Emergency

In the event of a sensor short-circuit or sensor break, the CANtrans transmitters will send a high-priority emergency object (EMCY). The telegram will be repeated cyclically. The cycle time can be set.

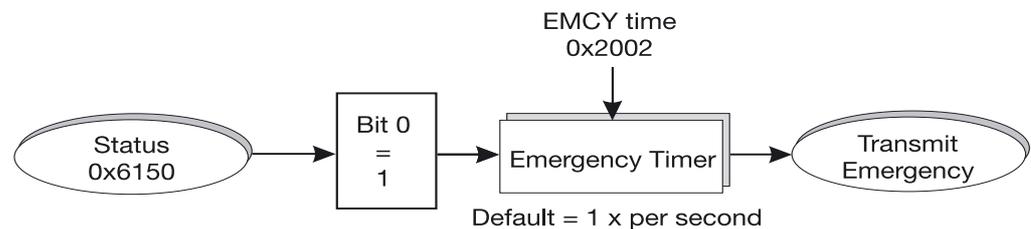

EMCY user data (8 bytes)

	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8
Sensor break	5030 h (hardware) 2 bytes		00000001 1 byte	1 or 2 (chann.) 1 byte	00000001 1 byte	not used		
Sensor short-circuit	5030 h (hardware) 2 bytes		00000001 1 byte	1 or 2 (chann.) 1 byte	00000010 1 byte	not used		
Reset error	0000 h (hardware) 2 bytes		00000000 1 byte	1 or 2 (chann.) 1 byte	xxxxxxx 1 byte	not used		

5 CANopen function

Setting for Emergency

Factory setting: once per second (= 1000 msec)

EMCY time	Setting the object 0x2002
milliseconds	0 – 65535 (0 = not repeated)

5.5 PDO

1 or 2 transmit PDO(s) (process data object) are available for the measurements.

The setting for mapping (0x1A00) of the PDO user data is fixed to 0x9130 (measurement in fixed-point format) and to 0x6150 (status byte).

The calculation of these values is described in see chapter 6 “Device function”, page 23.

PDO user data (5 bytes)

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8
0x9130 4 bytes measurement INT32				0x6150 1 byte status bit 2, 1, 0	not used not included in transmission		

Status bit 0 = Sensor faulty (sensor monitoring)



If bit 0 is set, the measurement transmitted in the PDO is invalid!


Status bit 1 = overrange (measurement range monitoring)

Status bit 2 = underrange (measurement range monitoring)

5 CANopen function

PDO output control

The graphic below shows possible events that will lead to a PDO telegram being transmitted. The setting options are described below. For calculating the measurement and status, see see chapter 6 “Device function”, page 23.

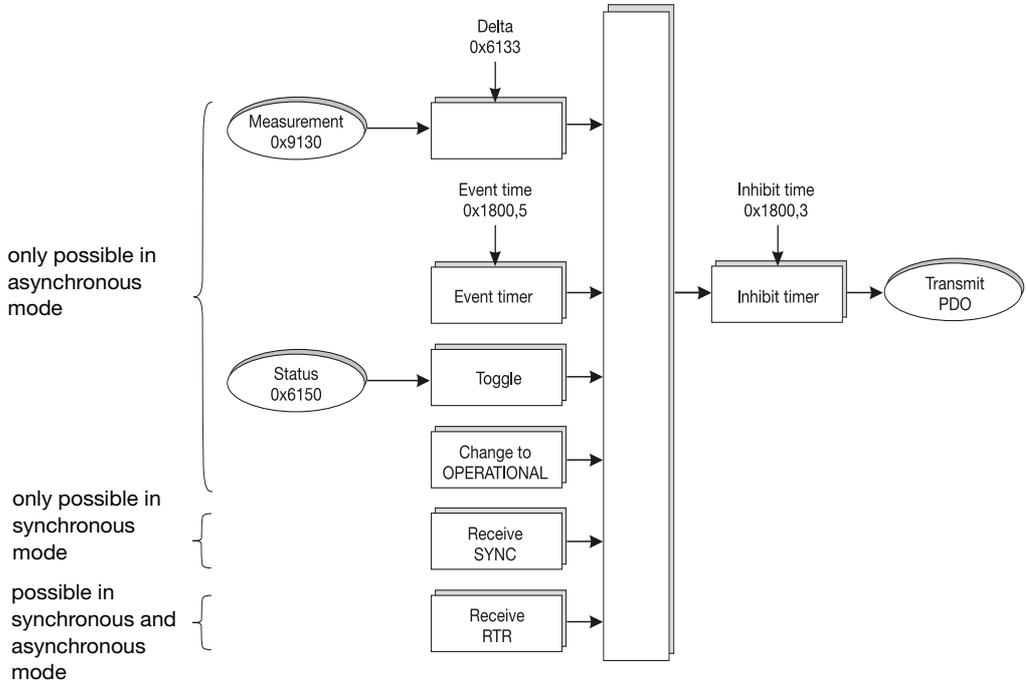

Mode see chapter 5.3 “Sync”, page 16

Settings for PDO output

Delta:

If a measurement modification exceeds the set value, a PDO is sent.
Factory setting: 1

Delta	Setting the object 0x6133,1 (for PDO 1) 0x6133,2 (for PDO 5)
Float value	(0 = inactive)

Event time (cyclic transmission):

When the set event time has elapsed, a PDO is sent.
Factory setting: once per second (= 1000 msec).

Event time	Setting the object 0x1800,5 (for PDO 1) 0x1804,5 (for PDO 5)
milliseconds	0 – 65535 (0 = inactive)

Toggle:

A PDO is sent for each change of the measurement status.

5 CANopen function

Operational:

When changing to the “Operational” status, a PDO is sent once.

Sync:

If the transmission type has been configured as “synchronous”, a PDO is sent on receipt of the Sync object.

Description see chapter 5.3 “Sync”, page 16.

RTR (Remote Transmission Request):

If requested by a PDO recipient, a PDO is sent.

Inhibit time

The transmission of a PDO is suppressed before the set inhibit time has elapsed. This will reduce the load on the bus and prevent it from being overloaded.

Factory setting: 0 (= inactive)

Inhibit time	Setting the object 0x1800,3 (for PDO 1) 0x1804,3 (for PDO 5)
0.1 milliseconds	0 – 65535 in 1/10 msec (0 = inactive) Example: 1000 = 100 msec

5.6 SDO


The service data object (SDO) is used for accessing the object dictionary (transmitter parameters). Using the SDO, it is possible to gain read or write access to the object dictionary.

For a description of all objects: see see chapter 7 “Object dictionary”, page 25.

5 CANopen function

5.7 Heartbeat

The Heartbeat object signals the presence of a transmitter, thereby ensuring system reliability. It provides a simple alternative to the Node Guarding protocol (see chapter 5.8 “Node Guarding”, page 21).

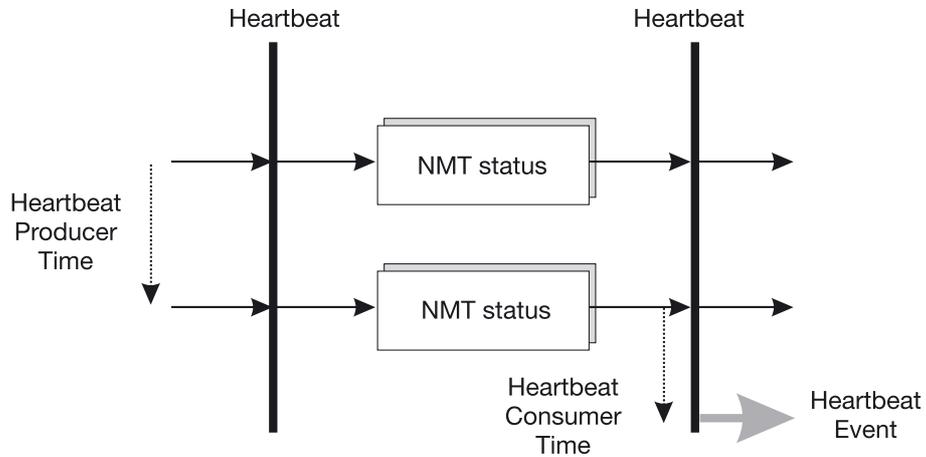

Heartbeat user data

The heartbeat message (heartbeat event) consists of one byte. In this byte, the NMT status of the internal status machine is coded as follows:

Bootup: 0
 Stopped: 4
 Operational: 5
 Preoperational: 127

Settings for heartbeat

The configuration as a heartbeat sender takes place via the heartbeat producer time in the object dictionary (0x1017).

The Heartbeat and Node Guarding functions can only be activated one at a time, but never simultaneously.

Factory setting: heartbeat switched off (= 0).

Heartbeat timer	Setting the object 0x1017
milliseconds	0 – 65535 0 = inactive


5 CANopen function

5.8 Node Guarding

The Node Guarding object provides an alternative to the Heartbeat object (see chapter 5.7 “Heartbeat”, page 20).

It indicates the presence of a transmitter, thereby ensuring system reliability. Unlike Heartbeat, in the case of Node Guarding the NMT master (usually a PLC) sends a request, which is answered by the NMT slave (here: the CANtrans transmitter).

The structure of the Node Guarding response is similar to that of the Heartbeat protocol. The only difference is that it contains an additional toggle bit that changes between 0 and 1 for consecutive messages.

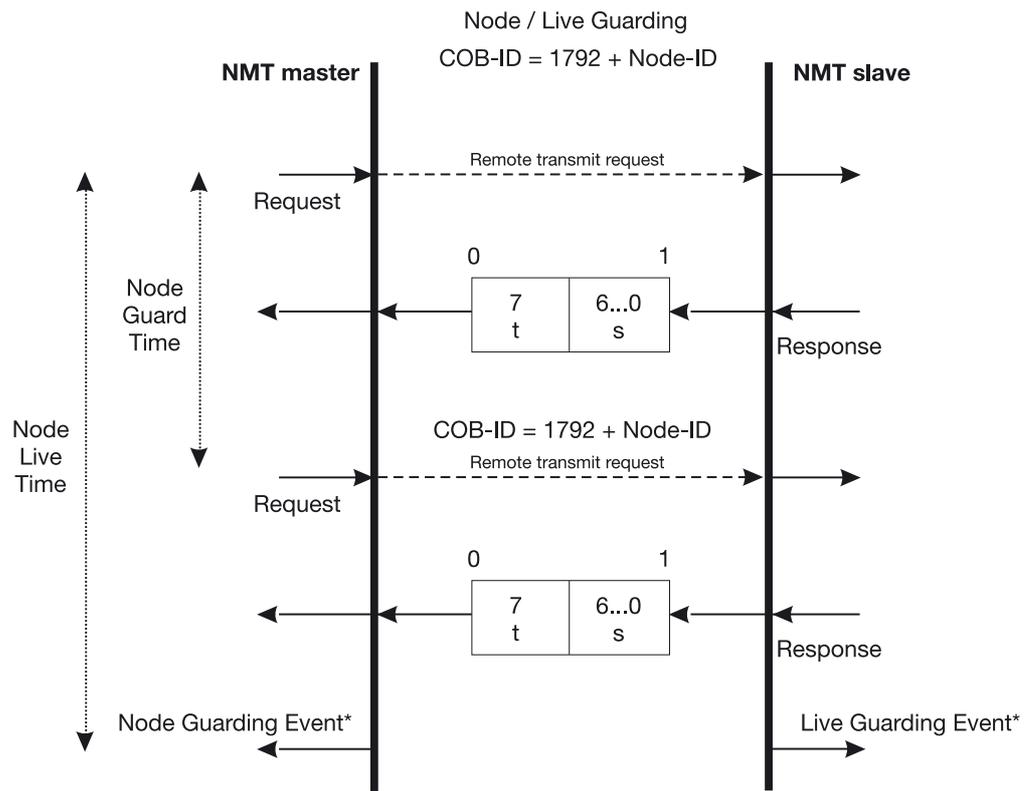

* if an error is detected

- s: status of the NMT slave
 - 4: STOPPED
 - 5: OPERATIONAL
 - 127: PREOPERATIONAL
- t: toggle bit

Node Guarding user data

The Node Guarding message contains one byte, consisting of the toggle bit t and the NMT status s, which is coded as follows:

Bootup:	0
Stopped:	4
Operational:	5
Preoperational:	127

5 CANopen function

Settings for Node Guarding

The settings for the Node Guarding slave are made in the object directory, via the parameters Guard Time (0x100C) and Live Time Factor (0x100D).

The Node Guarding slave calculates its own live time to be the product of these two parameters. If the transmitter does not receive a Node Guarding request within the live time, the Live Time Guarding Event is initiated and the transmitter adopts the "Preoperational" state.

If Guard Time **or** Live Time Factor has the value 0, then Live Time = 0 and no Live Guarding Event is initiated. The NMT slave, however, will still answer any NMT request by the NMT master.

If Guard Time **and** Live Time Factor have the value 0 (factory setting), Node Guarding is not active.

The Node Guarding and Heartbeat functions can only be activated one at a time, but never simultaneously.

Guard Time	Setting the object 0x100C
milliseconds	0 – 65535 (0 = inactive)

Live Time Factor	Setting the object 0x100D
Factor	0 – 255 (0 = inactive)

5.9 LSS

CANtrans transmitters support the LSS standard (Layer Setting Services) as per DSP-305, V1.1.

This can be used to set the baud rate and node ID for the entire plant in a standardized manner.

The LSS address of the transmitter is specified on the nameplate, so it is visible from the outside.

The latest setup tools from different manufacturers can also be used to operate this function.

As an alternative, the baud rate and node ID are also settable via objects in the object dictionary.

see chapter 4.1 "Setting the CAN baud rate", page 12;

see chapter 4.2 "Setting the node ID", page 13.


6 Device function

6.1 Device profile

CANtrans transmitters operate according to the CANopen device profile DS-404 “Measuring Devices and Closed-Loop Controllers”. The graphics below show the signal flow of the measurement through the transmitter functions. Some functions can be set by the customer.

The setting options are described in
⇒ Chapter 7 “Object dictionary”, page 25.


6.2 Data flow: pressure channel

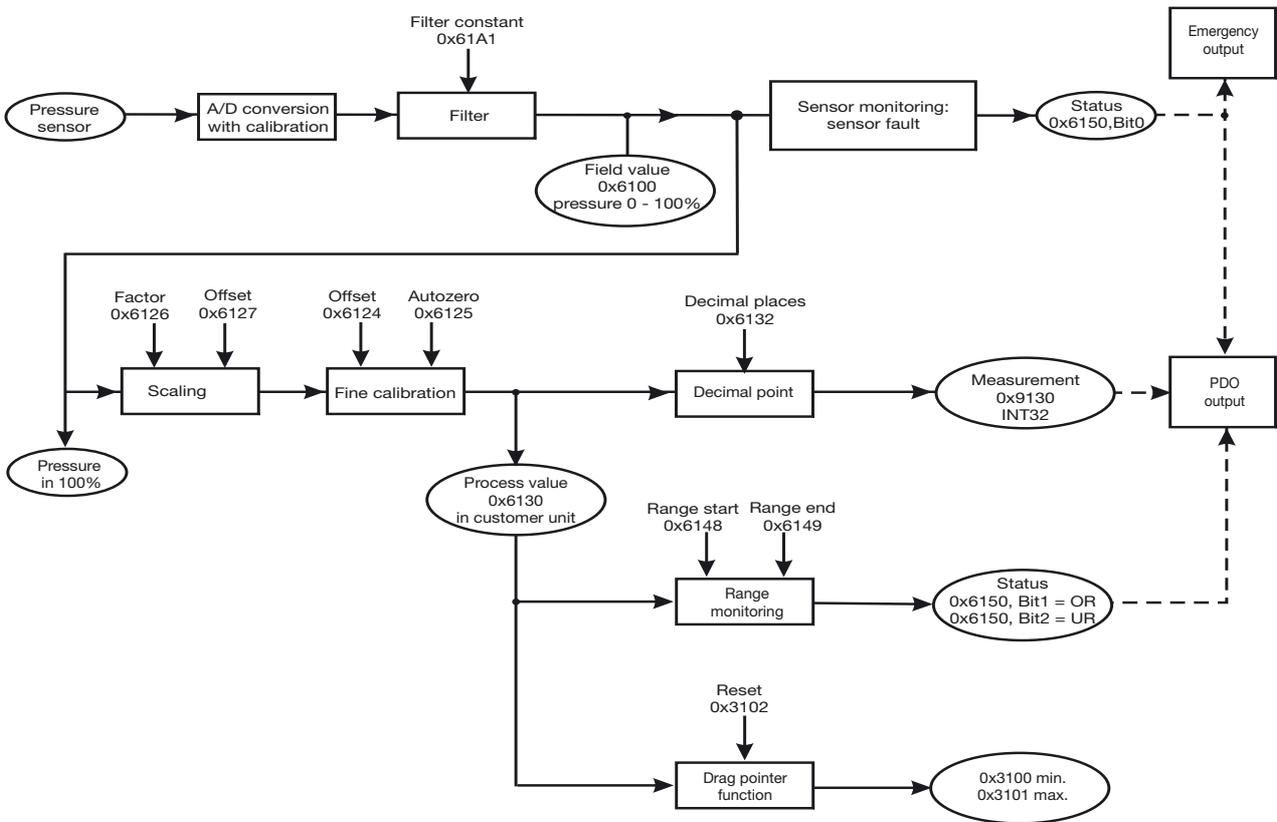

The calculation for the pressure channel is processed every 1.0 msec.

6 Device function

6.3 Data flow: temperature channel

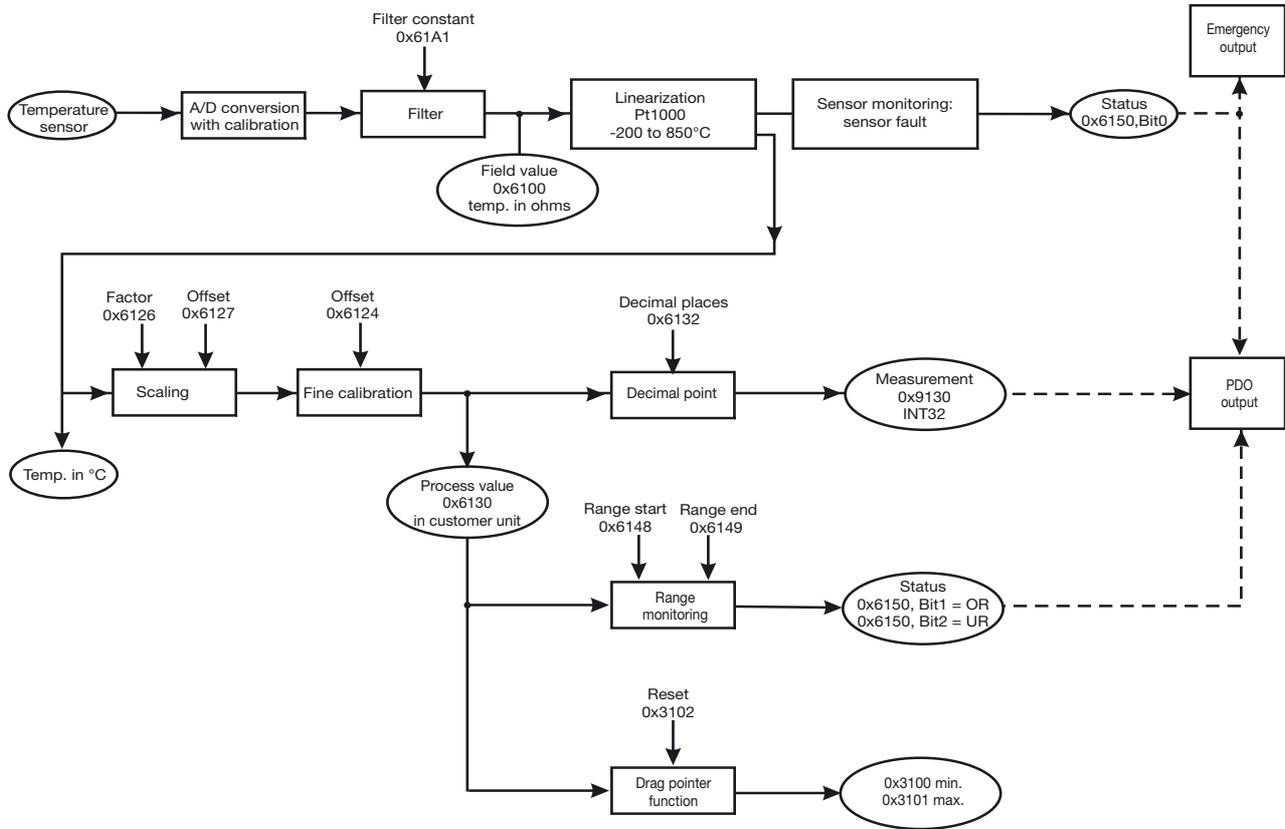

The calculation of the temperature channel is processed every 250 msec.

7.1 Overview

The entire object dictionary is available as an EDS file, thereby enabling all CANopen-compatible configuration programs to be used for installation and parameterization. For this reason, JUMO does not supply a setup program for these devices.

The most important setting parameters are summarized below, together with their possible values.

All objects can be read, or written, with SDO telegrams. This object dictionary is valid for all CANtrans variants. Depending on the device, some objects have 1 or 2 subindices. Accordingly, the CANtrans p, for example, only has the subindex 1 = pressure channel, whereas the CANtrans pT has the subindex 1 = pressure channel and the subindex 2 = temperature channel.

For all device types, the corresponding EDS file is downloadable free of charge from the JUMO home page => www.jumo.net.

Index	Sub-index	Format	Access	Name	Description	Value
0x1017	-	UINT16	RW	Heartbeat Producer Time	Time for cyclic transmission of a "sign of life"	0 – 65535 msec 0 = inactive ex-factory: 0
0x100C	-	UINT16	RW	Guard Time	Time factor for monitoring Node Guarding	0 – 65535 msec 0 = inactive ex-factory: 0
0x100D	-	UINT8	RW	Live Time Factor	Multiplier for monitoring Node Guarding	0 – 255 0 = inactive ex-factory: 0

7 Object dictionary

0x1800	-			PDO 1 Communication Parameter	Controls the transmission conditions for 1st PDO	
	0x01	UINT32	RW ¹	COB-ID	ID with which the PDO is transmitted	0x180 – 0x57F bit 0x80000000 set = PDO inactive ex-factory: 0x180+Node-ID
	0x02	UINT8	RW ¹	Transmission Type	Transmission mode	0x01 = synchronous 0xFF = event-controlled ex-factory: 0xFF
	0x03	UINT16	RW ¹	Inhibit Time	Do not transmit before time has elapsed	0 – 65535 (x 0.1 msec) ex-factory: 0 = inactive
	0x05	UINT16	RW ¹	Event Time	Time for cyclic transmission	0 – 65535 msec 0 = inactive ex-factory: 1000 msec
0x1804	-			PDO 5 Communication Parameter	Controls the transmission conditions for 2nd PDO (on devices with 2 sensors)	
0x1F80	-	UINT32	RW	NMT Startup	Bootmode ⇒ Chapter 5.2 “NMT”, page 15	0xC "Preoperational" 0x8 "Operational" Ex-factory: 0xC
0x2000	-	UINT8	RW ¹	Node-ID	Setting the node address via SDO (also possible via LSS)	1 – 127 ex-factory: 123 (PT) ex-factory: 124 (P) ex-factory: 125 (T) ex-factory: 126 (TT)
0x2001	-	UINT8	RW ¹	Baud rate	Setting the baud rate via SDO (also possible via LSS)	0 = 1 Mbaud 1 = 800 kbaud 2 = 500 kbaud 3 = 250 kbaud 99 = 200 kbaud 4 = 125 kbaud 98 = 100 kbaud 6 = 50 kbaud 7 = 20 kbaud ex-factory: 2

7 Object dictionary

0x2002	-	UINT16	RW ¹	EMCY_Time	Time for cyclic transmission of error messages	0 – 65535 msec 0 = once ex-fact. 1000 msec
0x3100	0x01	float	RO	AI PV Min 1	Drag pointer minimum value	
	0x02	float	RO	AI PV Min 2	as subindex 0x01, for devices with 2 sensors	
0x3101	0x01	float	RO	AI PV Max 1	Drag pointer maximum value	
	0x02	float	RO	AI PV Max 2	as subindex 0x01, for devices with 2 sensors	
0x3102	0x01	UINT32	WO	AI Reset Min-Max 1	Reset drag pointers 0x3100 and 0x3101	Reset with "roeb" = 0x62656F72
	0x02	UINT32	WO	AI Reset Min-Max 2	as subindex 0x01, for devices with 2 sensors	
0x3400	-	String (4)	RW	AI Customer Date	any text, 4 bytes, e.g. date	ex-factory: "0003"
0x3401	-	String (4)	RW	AI Customer Name	any text, 4 bytes, e.g. name	ex-factory: "ROEB"
0x6124	0x01	float	RW	AI Offset 1	Customer fine calibration	ex-factory: 0
	0x02	float	RW	AI Offset 2	as subindex 0x01, for devices with 2 sensors	
0x6125	0x01	UINT32	WO	AI Autozero	With pressure sensors only: show current pressure as zero, alters object 0x6124,1	Set to zero with "zero" = 0x6F72657A
0x6126	0x01	float	RW	AI Scaling Factor 1	Scaling of factor	ex-factory: 1 e.g. 0.1, to show pressure not as 0 – 100% but as 0 – 10 bar; or e.g. 1.8, to show temperature not in °C but in °F.
	0x02	float	RW	AI Scaling Factor 2	as subindex 0x01, for devices with 2 sensors	

7 Object dictionary

0x6127	0x01	float	RW	AI Scaling Offset 1	Scaling offset	ex-factory: 0 e.g. 0.0, to show pressure not as 0 – 100% but as 0 – 10 bar; or e.g. 32, to show temperature not in °C but in °F.
	0x02	float	RW	AI Scaling Offset 2	as subindex 0x01, for devices with 2 sensors	
0x6130	0x01	float	RO	AI Input PV float 1	Process value as float (for readout via SDO)	
	0x02	float	RO	AI Input PV float 2	as subindex 0x01, for devices with 2 sensors	
0x6132	0x01	UINT8	RW	AI Decimal Digits 1	Decimal places for fixed-point representation as INT 32 as in PDO	0 – 3 ex-factory: 1 Example, pressure: 0 => 0 – 100 = 0 – 100% 1 => 0 – 1000 = 0 – 100.0% 2 => 0 – 10000 = 0 – 100.00% Example, temp.: 0 => 19 = 19°C 1 => 197 = 19.7°C 2 => 1973 = 19.73°C
	0x02	UINT8	RW	AI Decimal Digits 2	as subindex 0x01, for devices with 2 sensors	
0x6133	0x01	float	RW	AI Interrupt Delta Input PV1	Delta value for event-controlled PDO transmission	ex-factory: 1.0 (0 = inactive)
	0x02	float	RW	AI Interrupt Delta Input PV2	as subindex 0x01, for devices with 2 sensors	
0x6148	0x01	float	RW	AI Span Begin 1	Start of range monitoring	ex-factory: 0 (P sensor) ex-factory: -50 (T sensor)
	0x02	float	RW	AI Span Begin 2	as subindex 0x01, for devices with 2 sensors	
0x6149	0x01	float	RW	AI Span End 1	End of range monitoring	ex-factory: 100 (P sensor) ex-factory: 450 (T sensor)
	0x02	float	RW	AI Span End 2	as subindex 0x01, for devices with 2 sensors	

7 Object dictionary

0x6150	0x01	UINT8	RO	AI State 1	Error status (as also in PDO) bit 0 = sensor faulty bit 1 = overrange (value > object 0x6149) bit 2 = underrange (value < object 0x6148)	
	0x02	UINT8	RO	AI State 2	as subindex 0x01, for devices with 2 sensors	
0x61A1	0x01	UINT8	RW	AI Filter Constant 1	Filter time constant of floating average-value filter	ex-factory: 0 (inactive)
	0x02	UINT8	RW	AI Filter Constant 2	as subindex 0x01, for devices with 2 sensors	
0x9130	0x01	INT32	RO	AI PV32Bit1	Process value as Int32 (as also in PDO)	
	0x02	INT32	RO	AI PV32Bit2	as subindex 0x01, for devices with 2 sensors	

¹ The parameter alteration becomes only effective after a hardware reset, after the NMT command "Reset Communication" or after "Reset Node"
⇒ Chapter 5.2 "NMT", page 15!

8 Programming examples


8.1 General

You can compile simple CAN messages yourself and transmit them to the individual CAN devices by using the free PCANView program (supplied by Peak, www.peak-system.com).

8.2 Function


To start with, you will be asked to select the baud rate. It can be set by choosing one of the values displayed in the program window.

The default setting for the JUMO CANtrans transmitters as delivered is 500kbit/sec.

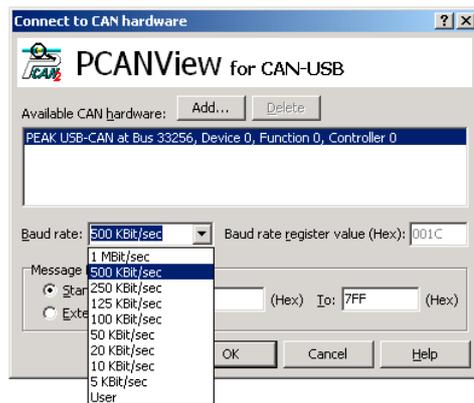

8.3 Testing the connection


After switching on the transmitter (power-on), you will see a message (bootup message) in the *Receive* field, which is transmitted for test purposes by all CANopen devices after switch-on.

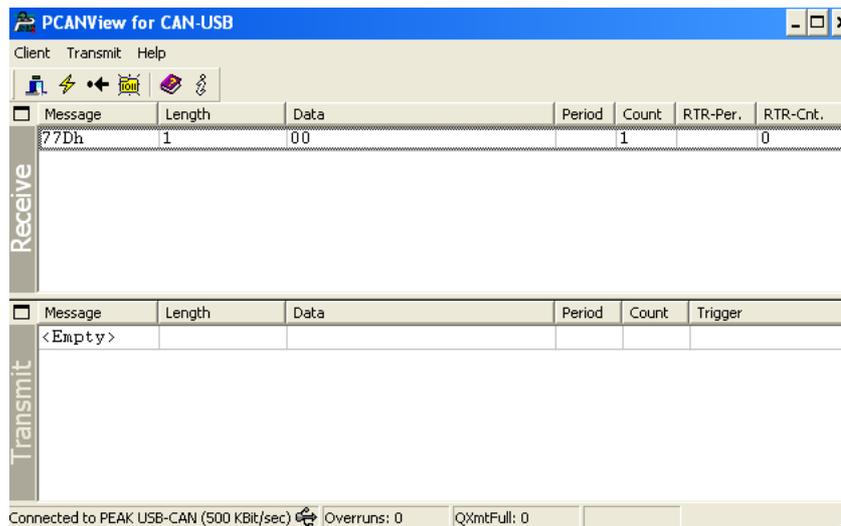

The program then gives you the option of entering CAN messages via the *Transmit* folder, in the sub-item *New transmit message*. The following window

8 Programming examples

appears:

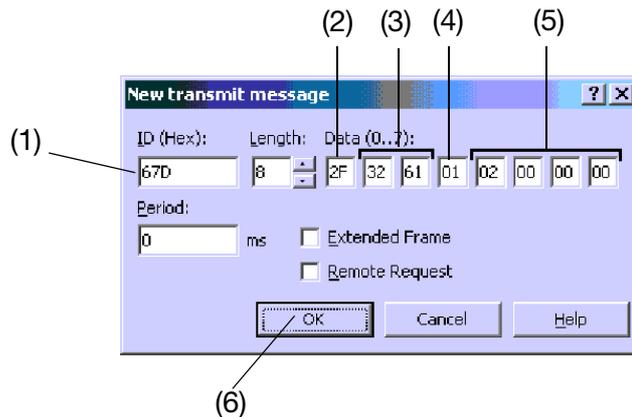

The **ID (Hex)** (1) determines the telegram type (PDO, SDO or LSS), the address and the priority of the message. The lowest ID has the highest priority in the case of CAN telegrams.

The fields **Data (0..7)** contain the user data of the CAN telegram in hexadecimal format. Please note the following arrangement:

The data field (2) contains the control byte. Here you can define whether the CAN device should be read out or written to. At the same time, you can also define the type of value here. The following parameters are possible:

Read:	0x40
Write an 8-bit value:	0x2F
Write a 16-bit value:	0x2B
Write a 32-bit value:	0x22

The next two bytes (3) specify the object index (Chapter 7), whereby it is absolutely essential to write the Low byte first and then the High byte. The object index 0x6132 has been entered in the screenshot above, by way of example.

The byte (4) specifies the 8-bit subindex, which can also be taken from the table in Chapter 7. The value 00 is entered here for objects without a subindex.

The last 4 bytes (5) contain object values that are read or written. As a rule, the Low byte must also be entered first here. The byte fields that are not required are filled with the value 00. Some examples will be given below.

The data telegram created in this way is transmitted to the CAN device by clicking **OK** (6).

The transmitted CAN message is logged in the "Transmit" field and listed.

The CAN response of the transmitter is logged in the "Transmit" field and listed.




Wrong entries may result in uncontrollable behavior!

8 Programming examples

8.4 Heartbeat Producer Time

(see Chapter 5.7 “Heartbeat”, page 20)

Alteration of the time for the cyclic transmission of a sign of life at 5000msec intervals (1388hex)

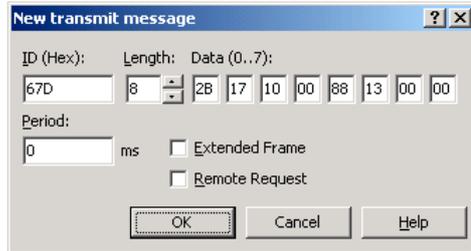


Node ID: 125_{dec}
COP ID: 67D_{hex}
Object index: 1017_{hex}
Subindex: 00_{hex}
Value: 1388_{hex}

8.5 Boot mode “Minimum bootup”

(see Chapter 5.2 “NMT”, page 15)

After switch-on, the transmitter should adopt the preoperational state.

A change of boot mode only becomes effective after a reset !

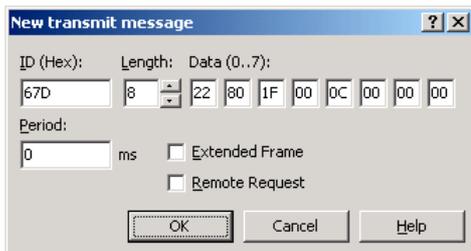


Node ID: 125_{dec}
COP ID: 67D_{hex}
Object index: 1F80_{hex}
Subindex: 00_{hex}
Value: 0C_{hex}

8.6 Event time

(see Chapter 5.5 “PDO”, page 17)

Set the time for cyclic measurement transmission to 2000msec (7D0hex)

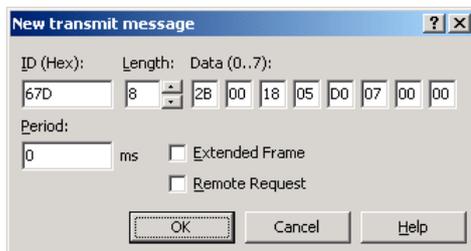

Node ID: 125_{dec}
COP ID: 67D_{hex}
Object index: 1800_{hex}
Subindex: 05_{hex}
Value: 7D0_{hex}


8 Programming examples

8.7 Setting the node ID

(see Chapter 4.2 “Setting the node ID”, page 13)

Set node address to the value 120 (78hex) via SDO

A change of the node ID only becomes effective after a reset !

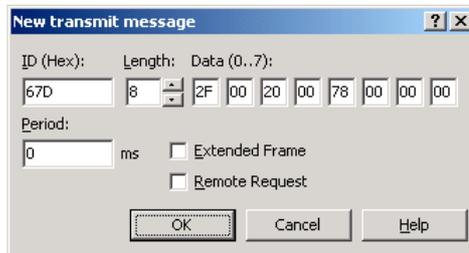


Node ID: 125_{dec}
COP ID: 67D_{hex}
Object index: 2000_{hex}
Subindex: 00_{hex}
Value: 78_{hex}

8.8 Setting the baud rate

(see Chapter 4.1 “Setting the CAN baud rate”, page 12)

Set the baud rate to the value 3 = 250kbaud (03hex) via SDO.

A change of the baud rate only becomes effective after a reset !

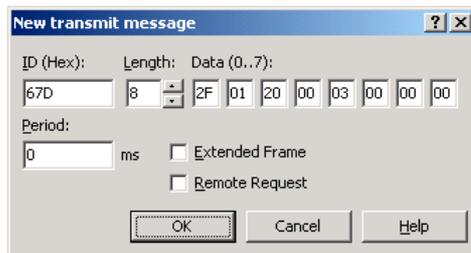


Node ID: 125_{dec}
COP ID: 67D_{hex}
Object index: 2001_{hex}
Subindex: 00_{hex}
Value: 03_{hex}

8.9 Reading out the minimum value

(see Chapter 6.2 “Data flow: pressure channel”, page 23)

Readout of the smallest value that was registered.

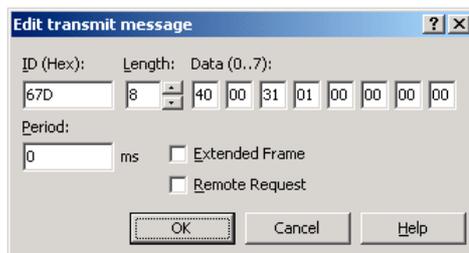


Node ID: 125_{dec}
COP ID: 67D_{hex}
Object index: 3100_{hex}
Subindex: 01_{hex}
Value: Read procedure

8 Programming examples

8.10 Reading out the maximum value

(see Chapter 6.2 “Data flow: pressure channel”, page 23)

Readout of the largest value that was registered.

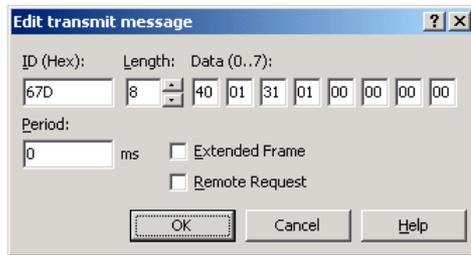


Node ID: 125_{dec}
COP ID: 67D_{hex}
Object index: 3101_{hex}
Subindex: 01_{hex}
Value: Read
procedure

8.11 Reading out the measurement in “Float” format

(see Chapter 6.2 “Data flow: pressure channel”, page 23)

Read measurement as “Float” (4-byte value) via SDO.

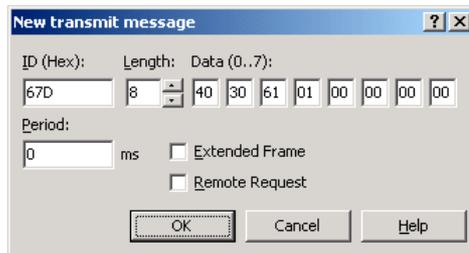

Node ID: 125_{dec}
COP ID: 67D_{hex}
Object index: 6130_{hex}
Subindex: 01_{hex}
Value: Read
procedure



JUMO GmbH & Co. KG

Street address:
Moltkestraße 13 - 31
36039 Fulda, Germany
Delivery address:
Mackenrodtstraße 14
36039 Fulda, Germany
Postal address:
36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
e-mail: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.

JUMO House
Temple Bank, Riverway
Harlow, Essex CM20 2TT, UK
Phone: +44 1279 635533
Fax: +44 1279 635262
e-mail: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

8 Technology Boulevard
Canastota, NY 13032, USA
Phone: 315-697-JUMO
1-800-554-JUMO
Fax: 315-697-5867
e-mail: info@jumo.us
Internet: www.jumo.us