

JUMO GmbH & Co. KG

Delivery address: Mackenrodtstraße 14,
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
E-mail: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.

JUMO House
Temple Bank, Riverway
Harlow - Essex CM20 2DY, UK
Phone: +44 1279 63 55 33
Fax: +44 1279 63 52 62
E-mail: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

8 Technology Boulevard
Canastota, NY 13032, USA
Phone: 315-697-JUMO
1-800-554-JUMO
Fax: 315-697-5867
E-mail: info@jumo.us
Internet: www.jumo.us



JUMO tecLine Ci-S

Inductive conductivity and temperature sensor for general process engineering

Brief description

The sensor detects the electrolytic conductivity of a process liquid. The sensor uses the inductive principle of measurement. An integrated (Pt1000) temperature sensor acquires the process temperature at the same time.

The sensors in this data sheet add some generally established variants in different engineering versions to the wide range of inductive JUMO conductivity sensors.

The sensors alternatively possess an exposed temperature sensor (in a stainless steel pocket) or an internal temperature sensor. They are used when it is not possible to use other measuring cell materials for chemical reasons.

All the sensors are made from hygienically safe materials and have proved to be reliable in typical food and drinks industry cleaning processes (e.g. CIP).

A vast number of process connections are available to ensure flexibility in systems, and can even be used as spare equipment for older instruments. There is an immersion variant that can be used in open tanks and channels.

Because it measures inductively, the sensor is practically maintenance-free, compared with the conductive method; deposits and grease or oil film on the surface of the sensor have virtually no effect on measuring accuracy.

JUMO tecLine Ci-S sensors are designed for connection to the JUMO AQUIS 500 Ci transmitter, as per data sheet 202566.

Typical areas of application:

Liquid foodstuffs, CIP/SIP systems, other rinsing and cleaning processes, measuring the concentration of acids, lyes and cleaning chemicals, etc.

Product advantages:

- Different mounting dimensions allow a variety of applications
- Materials are FDA/food-use approved
- Numerous process connection variants
- Fast-response temperature sensor



Type 202942/10-690-...

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14,
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 E-mail: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow - Essex CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 63 52 62
 E-mail: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 8 Technology Boulevard
 Canastota, NY 13032, USA
 Phone: 315-697-JUMO
 1-800-554-JUMO
 Fax: 315-697-5867
 E-mail: info@jumo.us
 Internet: www.jumo.us



Technical data

Conductivity measurement principle	Inductive																			
Conductivity measuring range	0 - 1000 µS/cm to 0 - 2000 mS/cm (depending on connected transmitter)																			
Conductivity accuracy for measuring range:																				
0 - 1 mS/cm	≤ 1 %																			
0 - 10 mS/cm	≤ 0.5 %																			
0 - 100 mS/cm	≤ 0.5 %																			
0 - 1000 mS/cm	≤ 1 %																			
0 - 2000 mS/cm	≤ 1 %																			
Cell constant	k = 5.45 1/cm																			
Temperature sensor	Pt1000, Class A																			
t₉₀ temperature^a	≤ 6 s																			
Permissible ambient temperature	-10 to +60 °C																			
Permissible storage temperature	-20 to +75 °C																			
Enclosure protection^b	IP67																			
Permissible medium temperature In operation Briefly (max. 15 min)	Note: the temperature, pressure and sample medium affect the service life of the measuring cell! -10 to +125 °C ≤ 140 °C																			
Permissible process pressure at +20 °C at +60 °C at +125 °C at +140 °C (max. 15 min) at -10 to +140 °C	10 bar 6 bar 2 bar unpressurized min. -0.1 bar	<table border="1"> <caption>Permissible process pressure vs temperature</caption> <thead> <tr> <th>Temperature [°C]</th> <th>Pressure [bar]</th> </tr> </thead> <tbody> <tr><td>-10</td><td>10</td></tr> <tr><td>20</td><td>10</td></tr> <tr><td>20</td><td>6</td></tr> <tr><td>60</td><td>6</td></tr> <tr><td>60</td><td>2</td></tr> <tr><td>120</td><td>2</td></tr> <tr><td>120</td><td>0</td></tr> <tr><td>140</td><td>0</td></tr> </tbody> </table>	Temperature [°C]	Pressure [bar]	-10	10	20	10	20	6	60	6	60	2	120	2	120	0	140	0
Temperature [°C]	Pressure [bar]																			
-10	10																			
20	10																			
20	6																			
60	6																			
60	2																			
120	2																			
120	0																			
140	0																			
Sensor material in contact with medium	dependent on design: PVDF, stainless steel 1.4301, AISI 304, stainless steel 1.4435, AISI 316L, EPDM																			
not in contact with medium	dependent on design: stainless steel 1.4301, AISI 304, PA6.6 GF30, PUR, FPM, CuZn																			
Process connection	see Order details / Dimensions																			
Electrical connection Connection type Socket Socket material Cable material Cable lengths Permissible temperature	JUMO tecLine Ci-S type conductivity sensors are suitable for connection to JUMO AQUIS 500 Ci type inductive conductivity transmitters/controllers! fixed connection cable M12 socket CuZn, PA6.6 GF30, PUR outer sleeve: PUR see Order details -20 to +75 °C																			
Approvals/marks of conformity	Materials in contact with the medium are approved for food use, are physiologically safe and are listed by the FDA.																			

^a DIN EN 60751.

^b DIN EN 60529.

JUMO GmbH & Co. KG

Delivery address: Mackenrodtstraße 14,
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
E-mail: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.

JUMO House
Temple Bank, Riverway
Harlow - Essex CM20 2DY, UK
Phone: +44 1279 63 55 33
Fax: +44 1279 63 52 62
E-mail: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

8 Technology Boulevard
Canastota, NY 13032, USA
Phone: 315-697-JUMO
1-800-554-JUMO
Fax: 315-697-5867
E-mail: info@jumo.us
Internet: www.jumo.us



Principle of measurement


The inductive method of measurement allows largely maintenance-free acquisition of specific conductivity, even in the toughest media conditions. Compared with the conductive method of measurement, problems such as electrode decomposition and polarization are practically non-existent. Conductivity is measured by an inductive probe. Sinusoidal AC voltage supplies the transmitter coil. Current is induced in the receiver coil, subject to the conductivity of the liquid to be measured. The current is proportional to the conductivity of the medium.

Instrument description

Measuring cell

The measuring cell consists of a hermetically sealed polypropylene (PP) or polyvinylidene fluoride (PVDF) body, with two measuring coils arranged inside it. A flow-through opening in the measuring cell allows the sample medium to pass through. Electrical isolation between the sample medium and the actual value output is inevitable, because of the principle of measurement.

The measuring cell is extremely temperature and pressure stable.

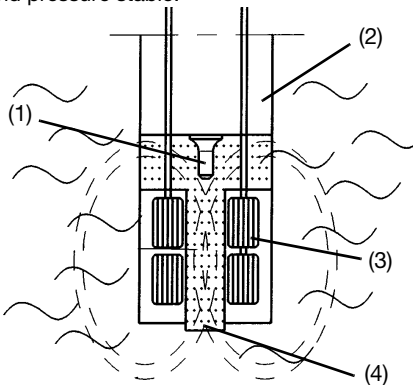

- (1) external temperature sensor
- (2) PEEK or PVDF cell body
- (3) measuring coils
- (4) liquid loop


Exposed temperature sensor:

The sensor in its stainless steel pocket reacts very quickly to changes in temperature.

Internal temperature sensor:

The sensor is integrated in the cell body. No metal comes into contact with the sample medium in this version (important for aggressive media). However, temperature acquisition is slower.

Measurement section setup

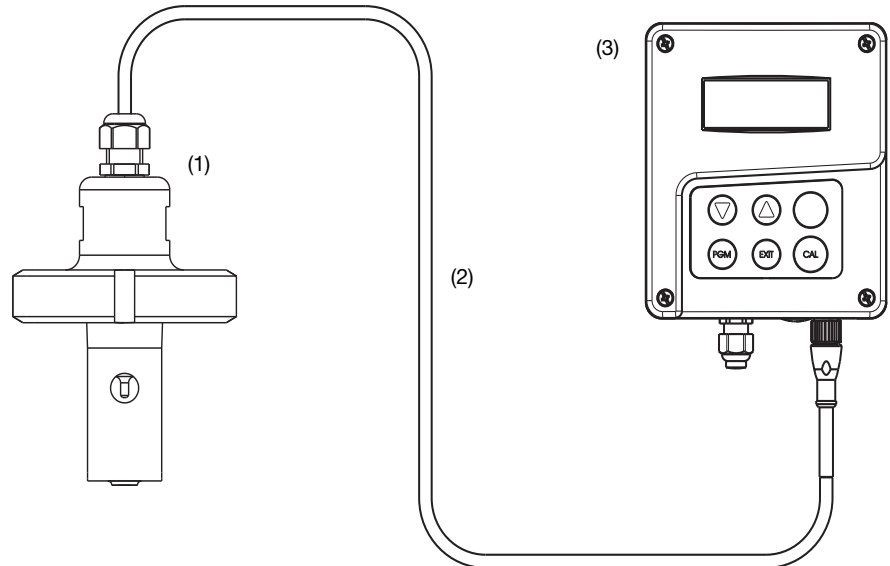

- (1) JUMO tecLine Ci-S, inductive conductivity and temperature sensor
- (2) Cable (component part of JUMO tecLine Ci-S), standard length 10 m
- (3) JUMO AQUIS 500 Ci, transmitter/controller for conductivity, concentration and temperature


JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14,
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 E-mail: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow - Essex CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 63 52 62
 E-mail: sales@jumo.co.uk
 Internet: www.jumo.co.uk


JUMO Process Control, Inc.
 8 Technology Boulevard
 Canastota, NY 13032, USA
 Phone: 315-697-JUMO
 1-800-554-JUMO
 Fax: 315-697-5867
 E-mail: info@jumo.us
 Internet: www.jumo.us




Dimensions/process connections (separate sensor)

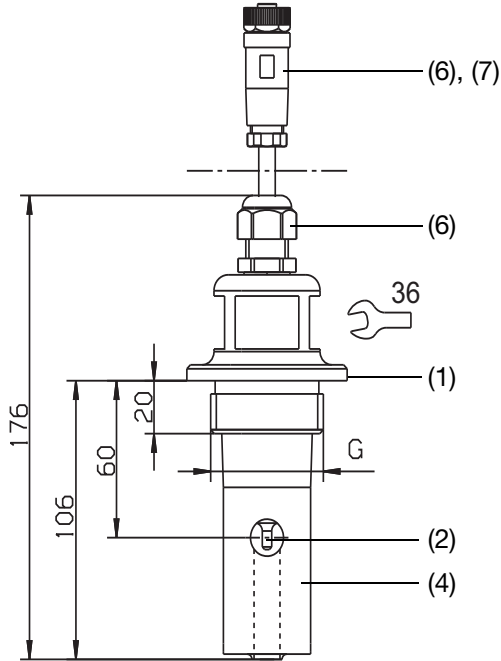


Version with process connection
 107 = engaged thread G1 1/4A
 108 = engaged thread G1 1/2A
 110 = engaged thread G2A
 and extra code 768

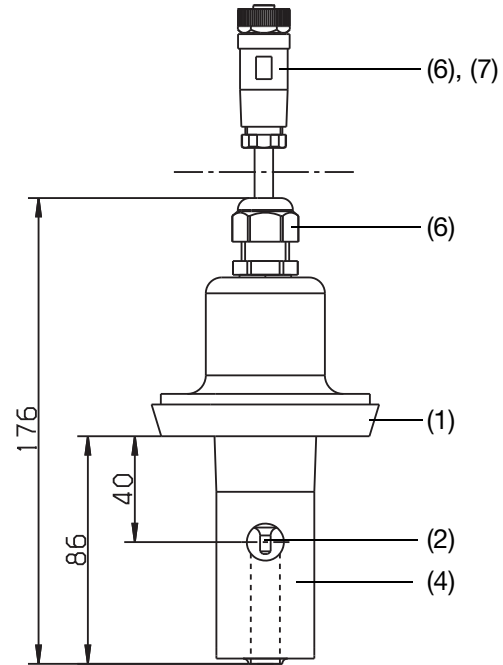

Remote version with process connection
 606 = MK DN40
 607 = MK DN50
 608 = MK DN65
 609 = MK DN80
 and extra code 768
 (union nut not included among the items supplied)

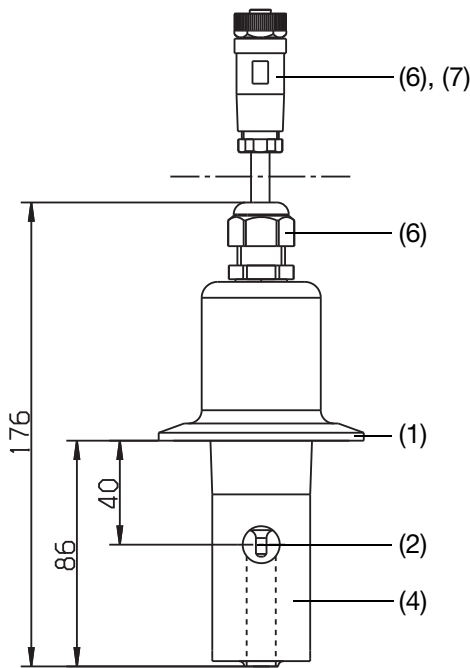

Remote version with process connection
 617 = 2 1/2" clamp
 and extra code 768
 (retaining clamp not included among the items supplied)

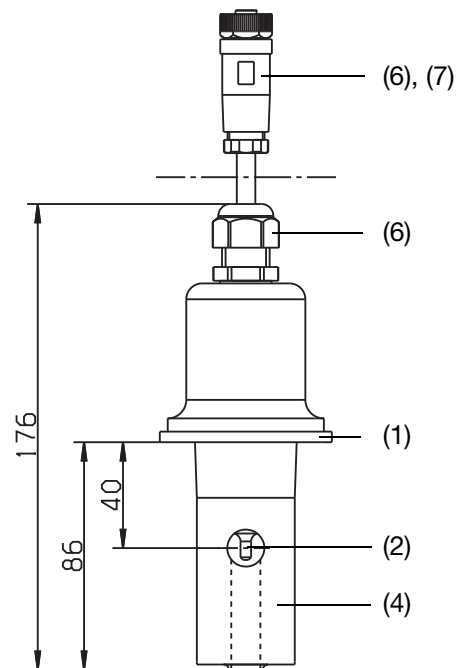

Remote version with process connection
 690 = 2" SMS
 and extra code 768
 (union nut not included among the items supplied)

(1) = stainless steel 1.4301

(2) = stainless steel 1.4435

(4) = PVDF


(6) = PA6

(7) = PPS GF40

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14,
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 E-mail: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow - Essex CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 63 52 62
 E-mail: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 8 Technology Boulevard
 Canastota, NY 13032, USA
 Phone: 315-697-JUMO
 1-800-554-JUMO
 Fax: 315-697-5867
 E-mail: info@jumo.us
 Internet: www.jumo.us

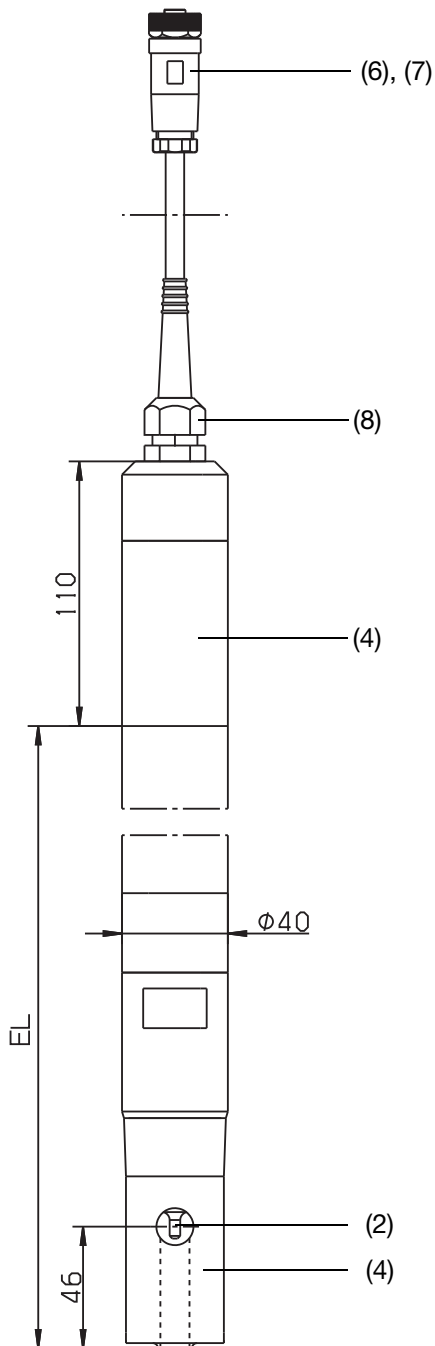

Remote version with process connection 706
 Immersion version
 (pipe clamps not included among the items supplied)

(2) = stainless steel 1.4435

(4) = PVDF

(6) = PA6

(7) = PPS GF40

(8) = nickel-plated brass and EPDM

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14,
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 E-mail: mail@jumo.net
 Internet: www.jumo.net



JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow - Essex CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 63 52 62
 E-mail: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 8 Technology Boulevard
 Canastota, NY 13032, USA
 Phone: 315-697-JUMO
 1-800-554-JUMO
 Fax: 315-697-5867
 E-mail: info@jumo.us
 Internet: www.jumo.us




Mounting examples


Weld-on threaded adapter

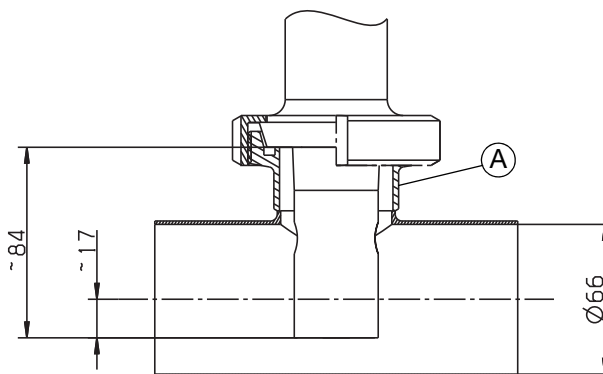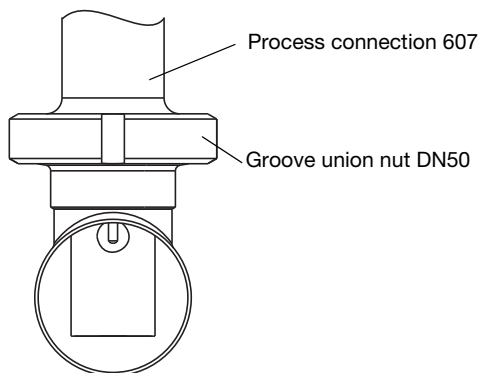

Reducing T-piece, DIN, short, SSS DN65/50
 (to be provided by customer; not supplied by JUMO)


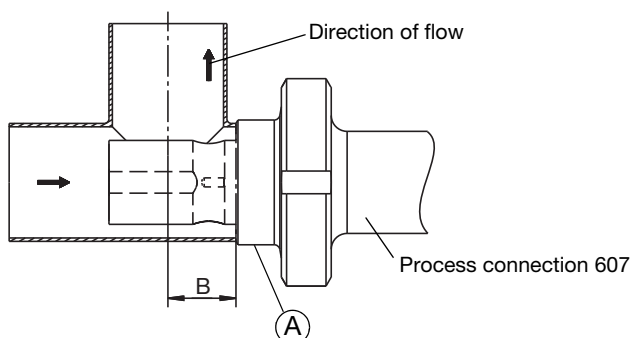


T-piece, DIN 11852, SSS DN50
 Dimension B reduced to 30 mm
 (to be provided by customer; not supplied by JUMO)

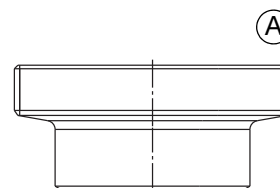

Weld-on threaded adapter
 DN50, DIN 11 851
 (mating piece for process connection 607)
 part no.: 00085020

Clamp

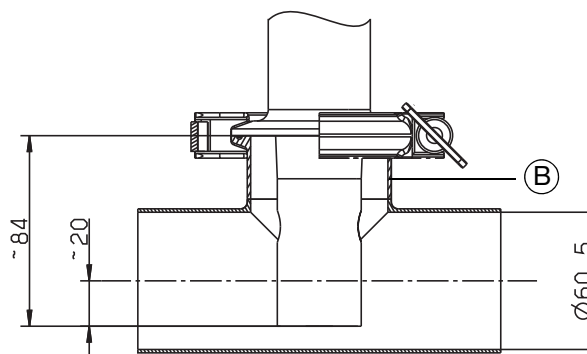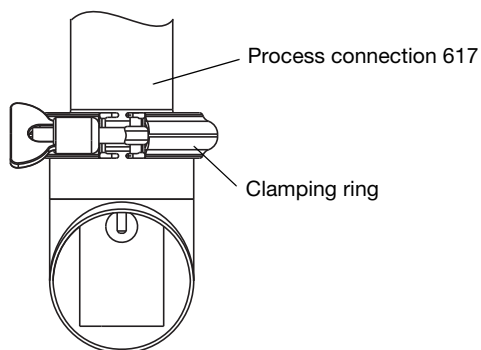

T-piece, short, SSS DN2.5"
 (to be provided by customer; not supplied by JUMO)

ⓑ "inch" threaded adapter, SSS DN2.5"

JUMO GmbH & Co. KG

Delivery address: Mackenrodtstraße 14,
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
E-mail: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.


JUMO House
Temple Bank, Riverway
Harlow - Essex CM20 2DY, UK
Phone: +44 1279 63 55 33
Fax: +44 1279 63 52 62
E-mail: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.


8 Technology Boulevard
Canastota, NY 13032, USA
Phone: 315-697-JUMO
1-800-554-JUMO
Fax: 315-697-5867
E-mail: info@jumo.us
Internet: www.jumo.us

**DN32 flange**

suitable for process connection 706
part no. 00083375
Material: PP

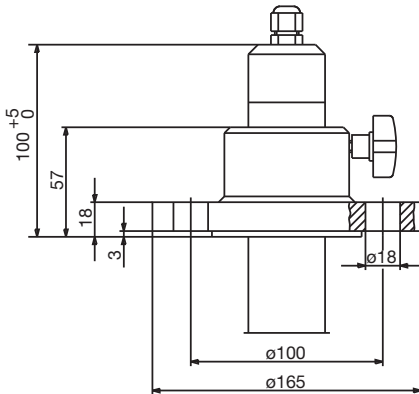**DN50 flange**

suitable for process connection 706
part no. 00083376
Material: PP

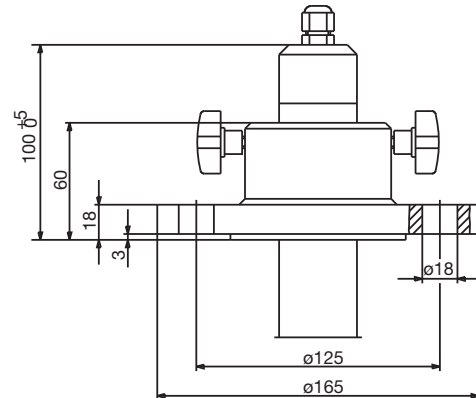

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14,
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 E-mail: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow - Essex CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 63 52 62
 E-mail: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 8 Technology Boulevard
 Canastota, NY 13032, USA
 Phone: 315-697-JUMO
 1-800-554-JUMO
 Fax: 315-697-5867
 E-mail: info@jumo.us
 Internet: www.jumo.us



Order details: **JUMO tecLine Ci-S**
Inductive conductivity and temperature sensor

(1) Basic type	
202942	JUMO tecLine Ci-S Inductive conductivity and temperature sensor for general process engineering
(2) Basic type extension	
10	PVDF sensor body
(3) Process connection	
107	G1 1/4A thread
108	G1 1/2A thread
110	G2A thread
606	Pipe union DN40, DIN 11 851(MK DN40, milk cone) ^a
607	Pipe union DN50, DIN 11 851(MK DN50, milk cone) ^a
608	Pipe union DN65, DIN 11 851(MK DN65, milk cone) ^a
617	2 1/2" clamp ^a , ISO 2852
690	2" SMS ^a
706	Immersion version ^a
(4) Immersion depth	
0000	without
0500	maximum immersion depth (EL) = 500 mm ^{a,b}
1000	maximum immersion depth (EL) = 1000 mm ^{a,b}
1500	maximum immersion depth (EL) = 1500 mm ^{a,b}
2000	maximum immersion depth (EL) = 2000 mm ^{a,b}
(5) Electrical connection	
21	Fixed cable with M12 cable socket
(6) Length of fixed cable	
10	10 m (standard)
20	20 m
30	30 m
(7) Extra codes	
000	none
268	Internal temperature sensor

^a Without mounting material (union nuts, retaining clamps, etc.)!

^b For process connection 706 only.

Order code	(1)	/	(2)	-	(3)	-	(4)	-	(5)	-	(6)	/	(7)
Order example	202942	/	10	-	607	-	0000	-	21	-	10	/	000

JUMO GmbH & Co. KG

Delivery address: Mackenrodtstraße 14,
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
E-mail: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.

JUMO House
Temple Bank, Riverway
Harlow - Essex CM20 2DY, UK
Phone: +44 1279 63 55 33
Fax: +44 1279 63 52 62
E-mail: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

8 Technology Boulevard
Canastota, NY 13032, USA
Phone: 315-697-JUMO
1-800-554-JUMO
Fax: 315-697-5867
E-mail: info@jumo.us
Internet: www.jumo.us

**Stock versions** (delivery 3 working days after receipt of order)

Type	Designation	Part no.
202942/10-607-0000-21-10/000	PVDF, pipe union DN50, DIN 11 851 (MK DN50, milk cone), 10 m fixed cable	00558364
202942/10-690-0000-21-10/000	PVDF, 2" SMS, 10 m fixed cable	00558365

Accessories (delivery 3 working days after receipt of order)

Designation		Part no.
Weld-on threaded adapter DN50, DIN 11851 (mating piece for process connection 607)	(PG 209791)	00085020
Groove union nut DN50, DIN 11851	(PG 209791)	00343368
Groove union nut DN65, DIN 11851	(PG 209791)	00362956
Groove union nut SMS DN2"	(PG 209791)	00345162
DN32 flange ^a , PP material	(PG 202820)	00083375
DN50 flange ^a , PP material	(PG 202820)	00083376
Calibration adapter for inductive conductivity measurement, type 202711/21	(PG 202711)	00543395

^a In conjunction with sensor with process connection 706 (immersion version) only.

Note

The following are required for the initial commissioning of the sensor and transmitter/controller or when replacing components:

- Transmitter/controller e. g. JUMO AQUIS 500 Ci, data sheet 202566
- JUMO tecLine Ci-S inductive conductivity and temperature sensor
- Calibration adapter for inductive conductivity measurement, type 202711/21, data sheet 202711